



14-006

SIDE STEP BRACKETS

WILL FIT E-Z-GO® TXT®



INSTALLATION INSTRUCTIONS

INCLUDED:

Mounting Bracket's
Hardware Pack
U-Bolts

TOOLS NEEDED:

30mm Socket
Adjustable Wrench
Cordless Drill
1/2" drive ratchet
13mm Socket
13mm Wrench

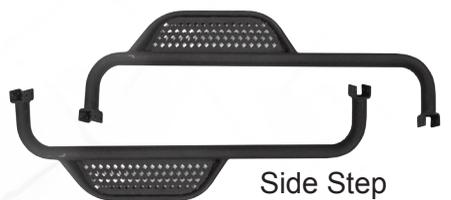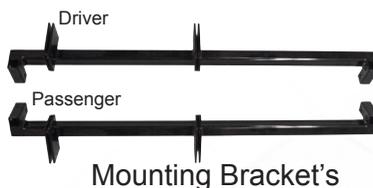


Side Step
(sold separate)


Madjax recommends professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves drilling holes into your cart's body.

Place bracket to frame as shown. Be sure to move any wire harness to outer side of slotted hole in frame. Square tabs of mounting bracket should fit tightly into corners of frame.

Note: Side step mounting locations should be on outside of bracket

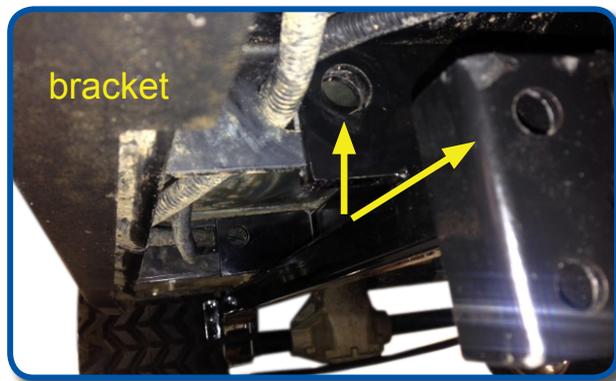

Secure bracket in both mounting locations using 20mm hardware provided. Tighten bracket hardware.

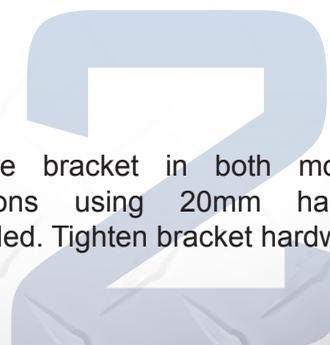



Using the 10mm x 55mm hardware provided attach step to bracket using 17mm socket and wrench. Once all 4-bolts are in place then tighten.

**Repeat steps 1-3 on opposite side.*

INSTALLATION COMPLETE

VISIT WWW.MYMADJAX.COM FOR MORE INSTALLATION VIDEOS.

*E-Z-GO®, E-Z-Go® TXT®, E-Z-Go® FREEDOM TXT®, E-Z-Go® CUSHMAN® and E-Z-Go® RXV® are registered trademarks of Textron Innovations, Inc. Club Car®, Club Car® Precedent®, and Club Car® DS® are registered trademarks of Ingersoll Rand, Inc. Yamaha®, Yamaha® Drive®, G-14®, G-16®, G-19®, and G-22® are registered trademarks of Yamaha Golf-Car Company. Any reference to Club Car®, E-Z-Go®, or Yamaha® or their associated trademarks, word marks, and products are only for purposes of identifying golf carts with which this Madjax product is compatible. Madjax products are aftermarket parts and are not original equipment parts. Madjax is not connected to, affiliated with, sponsored by, or endorsed by either Textron Innovations, Inc., Ingersoll Rand, Inc., Yamaha Golf Cart Company, or any of their parent or subsidiary companies.

HARDWARE PACK


Pack 1

- 4 – 20mm x 40mm hex head bolts
- 8 – 20mm flat washers
- 4 – 20mm lock nuts
- 8 – 10mm x 55mm hex head bolts
- 16 – 10mm flat washers
- 8 – 10mm lock nuts

14-006 - TXT NERF BAR BRACKETS
(GOES w/ 14-001 MJFX ARMOR DROP DOWN SIDE STEP NERF BA

WARRANTY PARTS
EXPLODED VIEW DIAGRAM

DIAGRAM SHOWS DRIVER SIDE BRACKET
(PASSENGER SIDE BRACKET IS MIRROR IMAGE)

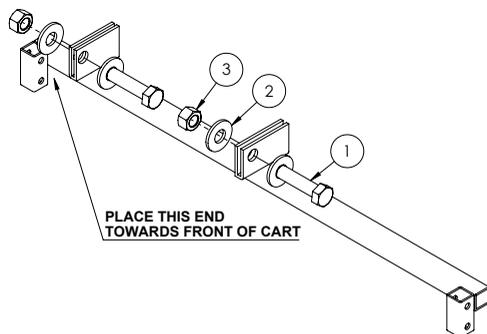

14-001 - MJFX ARMOR NERF BARS w/ DROP DOWN SIDE STEP
(TEXTURED MATTE BLACK)

WARRANTY PARTS
EXPLODED VIEW DIAGRAM

